



Operator's Manual



and

Technical Reference Guide



NEWPARK ENVIRONMENTAL SERVICES


BW GasAlertMax XT

CALIBRATION PROCEDURES

GasAlertMax XT

Operator's Manual

Connecting the Gas Cylinder to the Detector

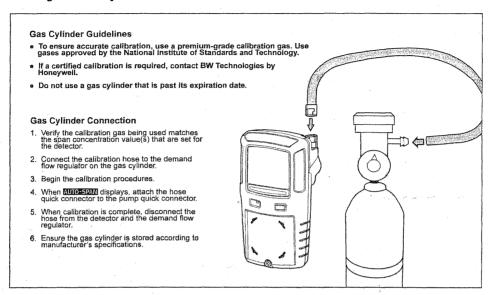

GåsAlertMax XT Calibration

Calibration

▲ Caution

Calibrate only in a safe area that is free of hazardous gas. Do not calibrate the detector during or immediately after charging is complete.

Note

The maximum hose length for calibration is 3 ft. (1 m).

Press and hold as the detector performs the OFF countdown. Continue to hold when the detector briefly deactivates.



The detector activates again and performs the CAL countdown. Continue to hold O until the countdown is complete to enter calibration.



AUTO-ZERO flashes while the detector zeroes all of the sensors.

If a sensor fails to auto zero, it cannot be spanned. When auto zero is complete, the LCD displays APPLY GAS.



 Refer to <u>Connecting the Gas Cylinder to</u> the <u>Detector</u> (page 7). Attach the demand flow regulator and apply gas.

Note

The diffusion cover must be attached to the detector to calibrate.

flashes on the LCD. After a sufficient amount of gas has been detected (30 seconds), the detector beeps.

MINISTER Flashes while the detector completes the span.



The LCD displays **CAL DUE**. Next, a screen displays showing the number of days remaining before calibration is due for each sensor. Last, the LCD displays (e.g.) **CAL DUE 180 d**. As some sensors require more frequent calibrations, the LCD displays the earliest calibration that must be performed.



Note

Calibration can be aborted at any time. To abort calibration, press . The CAL ABORTED screen displays.

<u>Note:</u> Calibrate unit every <u>30</u> days. Place sticker on side of unit indicating: Cal. Date:, Cal. By:, Next Cal. Due: